





ASUS F550 Wifi Card Replacement

Written By: Ryan

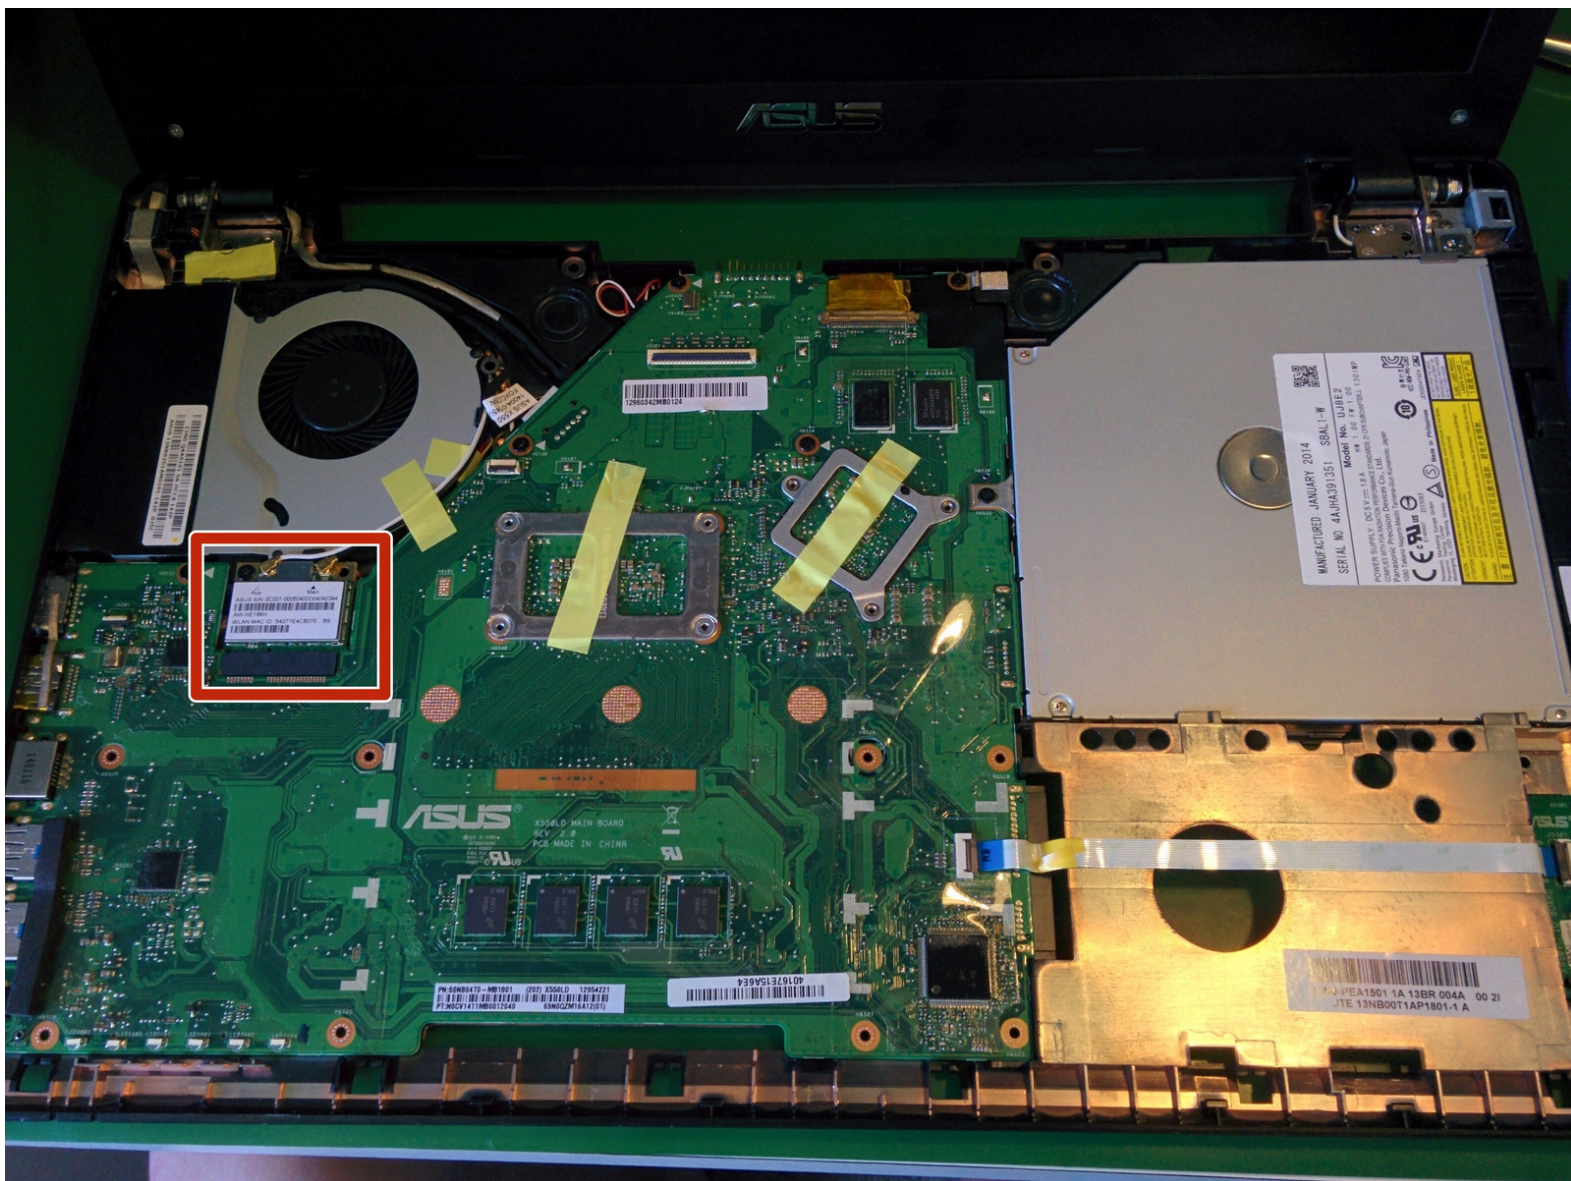


Step 1 — ASUS F550 HDD/Ram Cover Removal

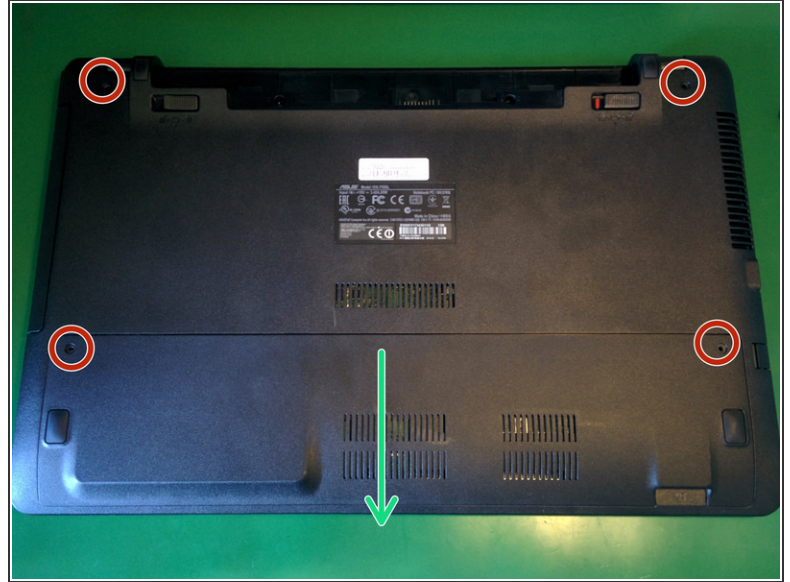


- Remove the battery, using release clips.
- ⓘ Ensure device has no residual power by attempting boot once battery is removed.
- Remove either 2 (or 4 for a full teardown) 12mm phillips screws, then removing the bottom cover to gain access to the HDD and RAM.
- Remove HDD and RAM cover

Step 2 — HDD

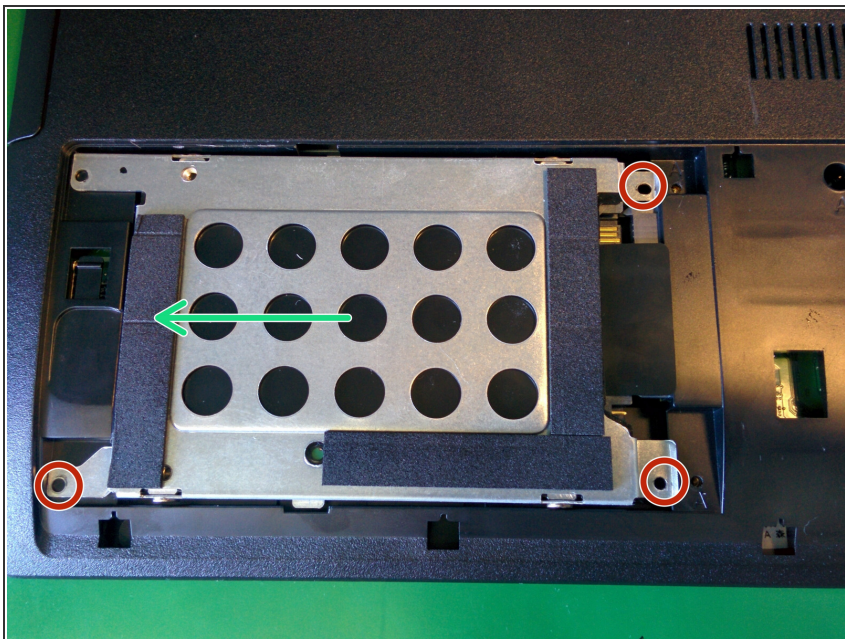


- Remove 3 5mm Phillips screws
- Slide HDD caddy back, remove using the black pull tab.

Step 3 — HDD Removal from Caddy

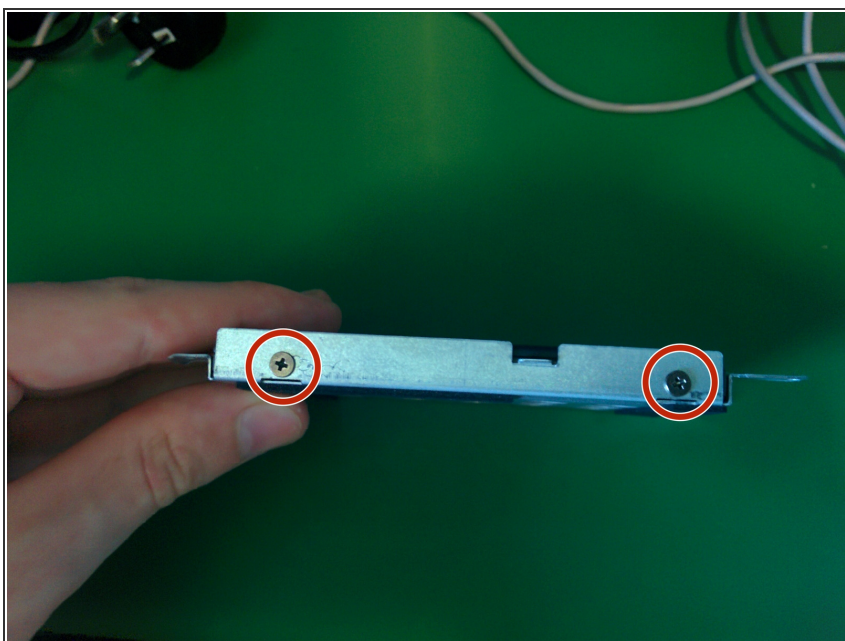



- Remove 4 Phillips screws, 2 per side
- Remove HDD from caddy.

Step 4 — Keyboard

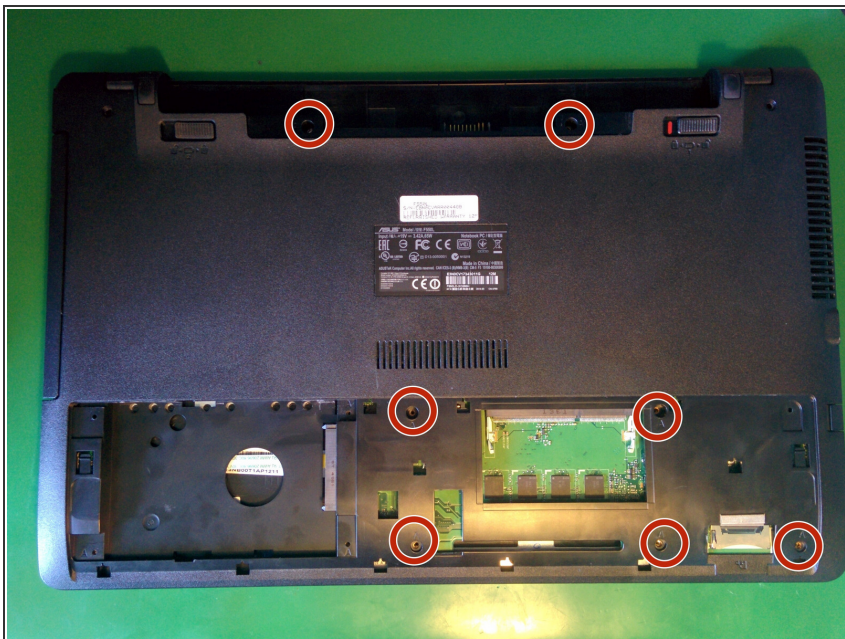

- Remove 7 5mm Phillips screws

Step 5

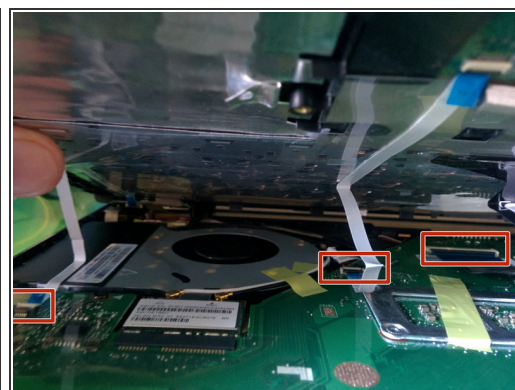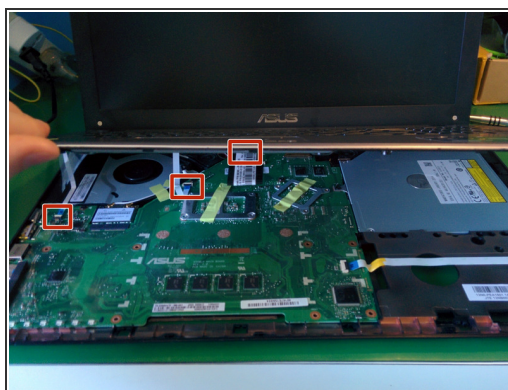

- Flip laptop and open lid. Separate the keyboard plate from the main housing, using a plastic prying tool. Being careful not to damage the LED indicators or other peripherals.
- Disconnect the LED, trackpad, and keyboard ribbon cables.
- The keyboard can now be removed

Step 6 — Wifi Card



- Locate Wifi Card
- Remove the antenna cables using a spudger tool.
- Remove the Philips screw The Wifi Card will pop up and should be easily removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-25 06:27:51 PM.